

Materials:

Marantz Recorder

USB Cable

AC Power Adapter

Micophone (Shure 58)

Microphone Cable

AA Batteries (8)

Battery Charger

Headphones

Using the Marantz Recorder:

- **Play:** Press and release to play back recorded audio.
- **Pause:** Press and release to pause recording, or pause playback. If you press Pause during recording, press the red record lever to the right to resume recording to the same track.
- **Stop:** Press and release to stop recording, or stop playback. If you press Stop during recording, the next time you record, it will be to a new track.
- **Record:** Push red lever to the right to begin recording. While recording, we recommend that you listen to what is being recorded with headphones.
- **Track Jump Buttons:** During playback, press and release to jump forward/backward one track.
- **REC UNDO Button:** During recording, press and release twice to erase the recording, and pause at the beginning of the track.
- **HP/SPK Volume:** adjust the headphone volume
- **REC Level:** adjust the volume at which audio records
- **MIC IN jacks**
 - For mono recording: use the left microphone jack
- **Battery Compartment (bottom of recorder)**
 - Recorder takes 8 AA batteries
 - Please plug in the recorder whenever possible in order to conserve battery power and extend battery life.

A few microphone tips

- The microphones included in the recording kit (**Shure 58**) have about a 145-degree radius for sound acceptance, which will allow you to pick up ambient sound in addition to the main audio that you want to record.
- To ensure clear audio, point the microphone directly at the sound you want to record; do not hold the microphone at an angle in the direction of the sound.
- If you are recording your own voice, hold the microphone approximately 6 inches from your mouth.

Transferring Sound Files from Marantz Recorder:

Connect the USB cable to the Marantz recorder and your computer. Power the recorder off. Press and hold the **USB Menu/Store button**, and **power on** the recorder. The display will show **USB Online**. The CF card in the recorder will appear as a removable device on the desktop, and your audio files are in a folder named **MPGLANG1**. Select the sound files that you would like to keep, and drag them to a folder on your computer desktop.